SUOER

SON-99E

Product introduction

Thank you for using this remote control! We are so glad toprovide you service. Please read the instruction before using, it will take your operation and use more convenience.
SON-99E is the new upgrade 3 in1 learning universal remote control, especially optimize and upgrade the original code and make every function humanized design. We believe this product can give you a new experience.

Panel explanation

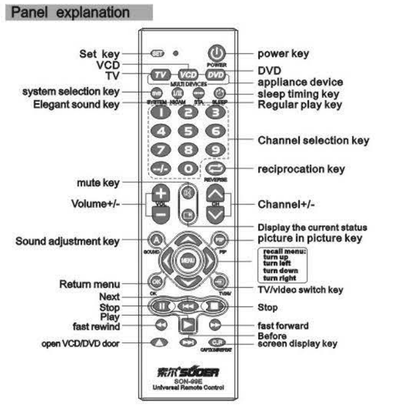

Remote control setting

You must set before you use this remote control , this introduction introduce the detail setting, including the following:

● battery installation ● Remote control preset ● remote control setting step

Battery installation

Open the battery compartment,install two new AAA battery(not ration)accor ding to the mark "+/-" on the compartment. Just like the following image:

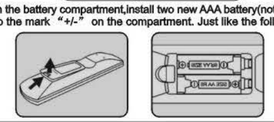

Friendly note

- The remote control is the low power consumption product. In the normal way,the battery can use 12 month.If the using way is now right,the battery using time will reduce.
- Do not mingle the new and old or different model battery.
- If you find the battery to lead,please take out and clean the baterry compar tment then change the new one.
- If you prepare not to use the remote control for a long time,please take out the battery.

TV setting step

Manual Setting

1、Please find the 3-digit code that represents the brand of the TV from the code list. If its code more than 1 set, please choose the first set code.

2、First press the "set" key all the time , and then press "TV" key. When the working Indicative light turnon , loseen the two key. Now it come into the code input state.

3、Enter a 3-digit code which you find, when you enter one digital, the indicative light should flash, after finish entering the 3 digital. The indicative light goes out.

Note:When the light continuously flash twotimes, the indicative light still on. That youjust need to enter into the right 3-digit codeagain, and don't need to repeat the step 2.If the indicator in the other state, you need to reset from the step2.

4、The indicative light goes out means the setting is finished .You can use your remote to control your TV.

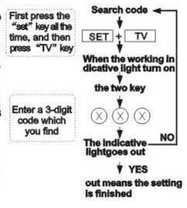

Search correct code

If you can not control the TV after you try all provided code , and if your TV brandnot in the code list ,please try the step as follow:

1、Please turn on your TV power switch.

2、Point remote control to the TV. Press the "SET" all the time, then press the "TV" key , until the work indicative light trun on and loseen the two buttons

3、Press the remote control voloume "+" and loseen ,and pay attention to the TV whether appear the volume or not, repeat this until the volume appear, and then press the button of "SET"

Note: when you press the voloume+ at each time, the remote control will shoot one code, If this code can be discerned by the TV, that can change the TV volume.

4、The indicative light goes out means the setting is finished. Checked the other buttons of the remote. If can work,such as the "power" key and so on. Than mean successful.

5、If it can't work normally, you must search again from step 2 until you find the right code.

Note: press the voloume+ each time, it would make the remote code add 1 in the original code, and shoot this code voloume+ one time , If it can t work normally, please refer to "Problem solving way."

VCD setting step

Manual Setting

1、Please find the 3-digit code that represents the brand of the VCD from the code list. If its code more than 1 set, please choose the first set code.

2、First press the "set" key all the time , and then press "VCD" key. When the working indicative light turnon , loseen the two key. Now it come into the code input state.

3、Enter a 3-digit code which you find,when you enter one digital, the indicative light should flash, after finish entering the3 digital.The indicative light goes out.

Note: when the light continuously flash two times, the indicative light still on. That you just need to enter into the right 3- digit code again, and don't need to repeat the step 2. If the indicator in the other state, you need to reset from the step 2

4. The indicative light goes out means the setting is finished .You can use your remote to control your VCD.

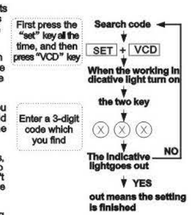

Search correct code

If you can not control the VCD after you try all provide code, and If your VCD brand not in the code list ,please try the step as follow:

1、Please turn on your VCD power switch, put into a video disk, and in to the standby state.

2、Point the remote control to the VCD. Hold on the "SET" all time , and press the "VCD" key, until the indicative light turn on and you oseen the two button.

3、Press the remote control "play" key and loseen, and pay attention to the VCD play or not, repeat this until the VCD play, and then press the button of "setting"

Note:when you press the "play" button at each time, the remote control will shoot one code, If this code can be discerned by the VCD, that can change the VCD volume.

4、The indicative light goes out means the setting is finished . Checked the other buttons of the remote. If can work, such as the "open" key and so on, than mean successful.

5、If it can't work normally, you must search again from step 2 until you find the right code.

Note: press the "play" button each time, it would make the remote code add 1 in the original code ,and shoot this code "play" code one time, If it cant work normally, please refer to "Problem solving way" .

DVD setting step

Manual Setting

1、Please find the 3-digit code that represents the brand of the DVD from the code list. If its code more than 1 set , please choose the first set code.

2、First press the "set" key all the time, and then press "DVD" key. When the working indicative light turn on, loseen the two key. Now it come into the code input state.

3、Enter a 3-digit code which you find, when you enter one digital, the indic ative light should flash, after finish entering the 3 digital. The indicative light goes out.

Note: when the light contin uously flash two times, the indicative light still on. That you just need to enter into the right 3-digit code again, and don't need to repeat the step 2. If the indicator in the other state, you need tore set from the step 2.

4、The indicative light goes out means the setting is finished. You can use your remote to control your DVD.

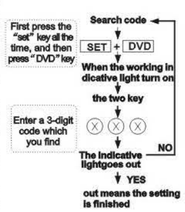

Search correct code

If you can not control the DVD after you try all provide code, and If your DVD brand not in the code list ,please try the step as follow:

1、Please turn on your DVD power switch, put into a video disk, and into the standby state.

2、Point the remote control to the DVD. Hold on the "SET" all time, and press the "DVD" key, until the indicative light turn on and you loseen the two button.

3、Press the remote control "play" key and loseen, and pay attention to the DVD play or not, repeat this until the DVD play, and then press the button of "setting"

Note: when you press the "play" button at each time, the remote control will shoot one code, If this code can be discerned by the DVD, that can change the DVD volume.

4、The indicative light goes out means the setting is finished. Checked the other buttons of the remote. If can work, such as the "open" key and so on, than mean successful.

5、If it can't work normally, you must search again from step 2 until you find the right code.

Note: press the "play" button each time, it would make the remote code add 1 in the original code, and shoot this code "play" code one time, If it can't work normally, please refer to " Problem solving way ".

Check the remote control can work or not

1、Please open the appliances power switch which you want to control, let the appliances (TV, VCD, DVD)into the standby state.

2、Point remote control to the appliances(TV, VCD, DVD), check dout every buttons of the remote if can work, such as the "mute" key and so on.

Note: after all the function buttons normal, that the remote control setting is finished. If part of the function buttons can not work or not match the panel. You should find the other code and use the search function, until you find the right code.

The use of the remote control

1、Point remote control to the appliances, use the "power" key to turn on or turn off your appliances.

2、Press the remote control other function keys to control the appliances.

Note:
- If use this remote control can not add the function on your appliances, its function depend on your appliances function. Such as: your appliances don't have the mute function , that the remote control "mute" key won't have any effect.
- This remote control maybe won't have any effect for part of the appliances function.
- When the remote control part of appliances, its function maybe not match the panel.

Counter- check unknown code Function

The function can be search the applian cemodel, throght the identify function, it can display your conveniently current the code been using. Record 3 few codes which have already identified. (the code c an record in the battery cover of the remote control the behind of the code form). For willing establish to provide more convenient for next time. Recognize current code Intelligently as following:

1) Press the" setting " is using all the time,and press the number 1again. Release the two buttons in the same time , and then you can comfirm and check the in indicotor if be shining, and mark down the times of shines. At that time the times of the shines is the first number of the current code.

2) Press the "setting" is usingall the time,and press the number2 again. Release the two buttons in the same time , and then you can comfirmand check the in indicotor if be shining, and mark down the times ofshines. At that time the times of the shines is the first number of the current code.

3) Press the "setting" is using all the time,and press the number 3 again. Release the two buttons in the same time, and then you can comfirm and check the in indicotor if be shining, and mark down the times of shines . At that time the times of the shines is the first number of the current code.

Note: When you are in identify the code, press the number is "1" or "2" or "3" , the indicotor light not lights, it means the identify number is "0"

Problem solving Way

If any problem occurs during setting or using this remote control:

- To set this remote control, please follow the steps in "to seatch applicable models by entering manual codes "carefully in case you are still unable to control your device after setting the first group of codes, if all the codes fail to enable your remote control functions(or if your household appliance is not included in the list), please try " to search applicable models in a manual steady maner
- If you have made mistakes during code input, you can simply re-enter a proper three-digit code as long as the work indicator does not go out . You need resetting from step I if it goes out.
- When searching applicable models in a manual steady manner, you must be patient to wait when search is being processed because of too many codes.
- If this remote control is operated improperly, the unit may be locked up. In this case, remove the batteries, replace them 20 minutes later, and the unit can restore its normal functions.

Technical parameter

Remote distance: more than eight meters(according to different model)
Battery model: 2 pcs of AA battery Power model: DC 3V
Shell material: ABS
Useful life of battery: about 12 months of under ordinary usage

After sale service

When you are using the remote control, if it has any problems, please contact with us. We should try our best to offer excellent service to you. Please do not try to open or repair the remote control wit out permission. If you do like that, we don't assume the responiblity. Hope you understand that.

CODE FORM FOR THE COMPONENTS

TV

BRAND	CODE
Changhong	000. 008. 009. 010. 011. 014. 016. 026. 028. 033. 051. 052. 057. 058. 067. 071. 086. 087. 088. 091. 092. 093. 100. 159. 162. 182. 183. 184. 226. 288. 289. 290. 291. 292. 297. 300. 336. 337. 338.
Konka	011. 017. 029. 032. 034. 054. 067. 069. 071. 076. 077. 078. 079. 080. 081. 107. 113. 117. 157. 163. 164. 165. 177. 210. 235. 250. 251. 252. 253. 254. 255. 257. 301. 302. 303. 321. 323. 324. 345
Skyworth	011. 025. 033. 045. 046. 060. 070. 071. 072. 073. 074. 079. 083. 101. 107. 108. 109. 143. 160. 168. 169. 170. 176. 180. 181. 194. 195. 196. 197. 198. 199. 200. 232. 234. 275. 276. 277. 278. 280. 281. 282. 283. 284. 308. 310. 312. 325. 326. 327. 346. 347.
TCL	051. 053. 068071. 073. 082. 083. 084. 085. 110. 111. 144. 156. 199. 209. 216. 243. 244. 245. 246. 247. 248. 249. 313. 314. 315. 316. 317. 320. 343. 344. 349. 350
Xogego	011. 016. 024. 025. 027. 033. 053. 054. 055. 056. 060. 073. 079. 080. 095. 098. 209. 211. 217. 229. 230. 231. 262. 295.
Hisense	000. 006. 007. 008. 010. 014. 015. 025. 045. 046. 057. 102. 103. 105. 107. 115. 116. 128. 129. 130. 131. 138. 139. 171. 172. 173. 174. 185. 186. 187. 188. 189. 190. 191. 224. 225. 233. 265. 266. 269. 270. 271. 273. 274. 299. 304. 305. 306. 307. 309. 318. 319. 339. 340. 341. 342. 348
Haier	103. 105. 112. 118. 119. 175. 178. 185. 186. 187. 188. 201. 205. 206. 218. 272.
Jingxing	007. 008. 011. 013. 024. 025. 032. 033. 039. 051. 057. 065. 071. 073. 079. 091. 097. 102. 107. 138. 225. 227.
Panda	001. 009. 011. 016. 021. 022. 023. 024. 025. 026. 028. 033. 040. 043. 051. 053. 056. 057. 058. 061. 062. 073. 079. 081. 089. 091. 101. 124. 125. 203. 204. 208. 263. 240. 296.
Sony	005. 041. 049. 094. 106. 148. 237. 238. 239. 240.
Panasonic	001. 002. 014. 015. 020. 021. 022. 066.
Hitachi	000. 006. 007. 008. 010. 014. 015. 027. 048. 179. 228.
Sharp	003. 016. 018. 025. 135. 136. 137.
Mitsubishi	011. 051
Toshiba	000. 007. 008. 014. 015. 016. 027. 028. 030. 033. 053. 056. 079. 089. 090. 091. 159. 285. 286. 287.
Philips	013. 023. 024. 039. 040. 043. 141. 241. 242.
Samsung	008. 011. 016. 021. 024. 025. 033. 037. 039. 040. 050. 051. 091. 113. 123.
Sanyo	000. 007. 008. 014. 015. 033. 035. 053. 056. 079. 105. 132. 133. 134. 202. 223. 352. 353. 354
NEC	006. 011. 016. 024. 025. 033. 053. 056. 079. 114
Daewoo	012. 042. 031
Beijing	008. 011. 012. 016. 019. 021. 023. 024. 025. 026. 027. 028. 029. 030. 031. 033. 039. 040. 042. 043. 050. 051. 053. 056. 079. 091. 122. 126. 233. 265. 298. 351
Xihu	011. 023. 024. 033. 038. 040. 043. 053. 079. 098. 131. 204. 219. 220. 221. 222
Conrowa	000. 006. 007. 008. 010. 016. 025. 033. 045. 046. 048. 053. 055. 056. 073. 099. 131. 204. 258
Lehua	011. 013. 016. 023. 024. 025. 033. 034. 040. 043. 053. 056. 060. 061. 065. 079. 102
Tobo	016. 025. 033. 053. 056. 077. 079. 101. 103
Furi	007. 011. 015. 023. 024. 028. 033. 034. 040. 043. 053. 056. 060. 061. 065. 079. 102
Anhua	001. 017. 032. 047
Baihua	016. 025. 033. 053. 056. 079
Baihehua	023. 024. 040. 043
Baile	012. 016. 019. 025. 026. 027. 028. 029. 030. 031. 042
Baosheng	011. 016. 025
Baihuas	033. 053. 056. 079
Caihong	011. 016. 025
Caixing	023. 024. 040. 043. 073
Changcheng	001. 011. 012. 016. 017. 019. 023. 024. 025. 026. 027. 028. 029. 030. 031. 033. 040. 042. 043. 053. 056. 079
Chengdu	011. 025
Changfeng	011. 024. 033. 045. 046. 053. 056. 079
Changfei	011. 016. 025. 042. 123
Changhai	011. 025. 016. 123
Chunlai	107. 131. 142
Chunfeng	016. 025. 033. 053. 056. 079. 124
Chunsun	011. 025. 016
Dongda	016. 025
Donghai	016. 025
Feilu	011. 016. 025
Huanghe	011. 016. 023. 024. 025. 040. 043. 051. 103. 125. 155
Huanghaimen	016. 025
Huangshan	011. 016. 023. 024. 025. 032. 033. 040. 053. 056. 079
Huanglong	016. 025
Huari	007. 033. 053. 056. 079
Haiyan	011. 023. 024. 033. 040. 043. 053. 056. 079
Haihong	016. 025. 026. 027. 028. 030. 077. 103. 268
Haile	032. 047
Huanyu	009. 011. 015. 023. 024. 033. 040. 043. 053. 056. 079
Hongmei	003. 009. 011. 016. 018. 023. 024. 025. 033. 040. 043. 056. 057. 058. 079
Hongyan	011. 033. 053. 056. 079
Juhua	011. 023. 024. 033. 040. 043. 053. 056. 079
Jinghai	009. 057. 058. 099
Jingfeng	001. 011. 021. 022
Jingta	009. 016. 023. 024. 025. 033. 040. 043. 053. 056. 057. 058. 079
Jingpue	011. 016. 025
Jingpue	032. 033. 053. 056. 079
Jiahua	001. 017. 032. 033. 047. 101. 149. 207
Kunlun	001. 011. 012. 021. 022. 025. 033. 039. 042
Kaige	011. 016. 023. 024. 025. 033. 040. 043. 053. 056. 079
Dangli	012. 016. 019. 024. 026. 027. 028. 030. 031. 033. 073. 120. 204. 271
Kanghong	009. 058. 057
Kangli	005. 011. 016. 023. 024. 025. 026. 027. 028. 029. 040. 042. 043.
Kangyi	016. 025. 033. 053. 079. 121
Kongque	011. 016. 023. 024. 025. 033. 040. 041. 043. 124
Kuaile	016. 025. 033. 053. 056. 079
Longjiang	011. 033. 053. 056. 079
Lihua	011
Peony	001. 002. 011. 016. 020. 022. 025. 032. 033. 039. 040. 043. 053. 056. 059. 063. 065. 079. 101. 107. 145. 146. 149. 218. 223
Meile	009. 011. 023. 024. 033. 040. 043. 053. 056. 057. 058. 079
Mengmei	023. 024. 040. 043
Nansheng	011. 033. 053. 056. 079
Qingdao	001. 011. 021. 022. 033. 053. 056. 079
Ruyi	011. 015. 023. 024. 040. 043
Shencai	007. 016. 025. 033. 053. 056. 079
Shaicai	011. 033. 053. 056. 079
Shanghai	009. 011. 016. 017. 022. 023. 024. 025. 033. 040. 043. 053. 056. 057. 079. 123
Saofeng	000. 006. 007. 011. 015. 023
Shengyang	011. 016. 025. 033. 045. 046
Saige	011. 016. 025
Songbo	016. 025
Saiyuan	003. 011. 016. 018. 023. 024. 025. 040. 043
Saijian	033. 053. 056. 079
Taisai	011. 016. 025. 027. 028. 029. 031. 038. 042
Tiane	003. 011. 018
Tongguang	033. 053. 056. 079
Weipian	016. 025
Xiangyu	016. 025. 032
Xielian	009. 023. 024. 040. 043. 057. 058
Xinghai	016. 025. 033. 053. 056. 079
Xiangyang	033. 053. 056. 079
Xingfu	016. 025
Xingrsong	009. 057. 058. 101
Yingge	016. 023. 024. 025. 040. 043
Yuhang	016. 025
Yonggu	016. 023. 024. 025. 040. 043
Yongbao	009. 057. 058
Zhuhai	016. 025. 042
888Pian	033. 053. 056. 079
Ganxin	011. 017. 023. 024. 027. 040. 041. 043
Huaqiang	003. 053. 056. 079. 236
JVC	004. 089. 161
Feiyue	011. 016. 023. 024. 025. 040. 043
Feilang	016. 025
Naibao	009. 016. 025. 033. 053. 056. 057. 058. 079
Feiyan	033. 053. 056. 079
Xinsida	123
NEC	089. 140
Cailing	102
Aolinpu	104
SVA	158. 166. 167
WARUMAIA	031. 012. 042
Youlanashi	011. 023. 024. 040. 043
Goldstar	009. 019. 023. 024. 040. 043. 098. 140
Ustar	016. 025. 009. 057. 058
Aihua	009. 057. 058
Huodateji	001. 017. 032. 047
Etron	016. 025. 028. 033. 053. 056. 079. 124. 178
Olympic	033. 053. 056. 079
Sherwood	016. 025
Akai	033. 053. 056. 079
Lmperislcown	012. 019. 025. 026. 027. 028. 029. 030. 031. 033. 053. 056. 042. 079
Fujitsu	048
Funai	047
Nikia	009. 057. 058
LG	024. 040. 098. 043. 140. 259. 260. 261.
OtherbrandTV	036. 044. 057. 073. 077. 097. 101. 102. 103. 104. 106. 114. 178. 293. 328. 329

DVD

BRAND	CODE
Avlight	351. 374. 374. 391.
Aiwa	150. 018
Aane	299
Anpiao	043. 223. 224.
Aiewangzi	066. 067. 466
Auqia	298. 352. 353
Aodelong	316
Akai	006
AIKO	179
AICO	170. 122
AIWA	256. 122
AKICO	122. 283
AKIRA	122. 258. 347
AKISHI	181
AKUSTIC	179. 258
ASATRON	122
ARASHI	122. 133
APEX	182
ASAKI	288. 122
AUDIOVOX	183
AUDIOTONE	070. 122
AVLIGTH	143
Brandt	064. 065
BBK	018. 021. 027. 028. 033. 048. 078. 091. 094. 099. 145. 287. 312. 339. 340. 429. 430. 431. 432. 433
BOMBA	122
BLUESKY	122
BM	122
BY	185
Caini	610
Caixing	088. 095
Changhong	136. 137. 138
CHANGHONG	136
CLASSIC	184. 270. 271
CRYSTAL	122
CYBERHOME	186
CYBERTRON	122
Daewoo	086. 087. 187. 188. 189. 190. 191. 192. 193. 194. 267. 279. 325. 468 487. 503.
Desay	026. 074. 117. 300
DAEWO	122. 286
DAIKEN	122. 258
DAITA	122
DVD VIDEO	122. 170. 280. 28
DENON	195
DIGIXMEDIA	196
ELEKTRA	192. 197
ELECTRIC	122
ELITE	122
EPROM	070. 122
EXTEND	122
FISHER	233. 262
FUSSION	198
FURICHI	122. 133
FUJI ELECTRIC	070. 122
GO VIDEO	199. 200
GPX	201
GE	231
GEM	122
GNG	122
GMC	122
Giec	089. 292. 294. 295. 296. 310. 322. 355. 485
Hisense	134. 143. 311. 415. 414
Huajia	125
HITACHI	202
Huabao	029. 061. 062. 063. 302. 426
Haie	116. 146. 390. 622
HAOJI	068
HARMAN KARDON	276
HITER	089
Idall	128. 471
Jiawu	075. 204. 205. 206. 489
Jinggewangpian	031. 283
Jingwinge	289. 290. 477
Juda	473
JVC	045. 203. 151. 275
Jinwen	011
Jugao	318
KAWACHI	122
Konka	139. 207
Kotan	030
Lishuma	036
Longzhipian	284
LASONIC	208. 209
LG	008. 338
LINITRON	241
LAFAYETTE	225
Maiata	002. 009. 023. 024. 073. 146. 147. 151. 297. 313. 341. 342. 388. 390. 456. 457. 458
Mintian	303. 304. 508
Marantz	211. 212. 213. 227
Mitsubishi	215
MAJESTIC	210. 265
MEGA TANSS	214
MITSUI	216. 217. 269
MITZU	179. 251
MTB	218. 219
MITO	122
MITOCHIBA	122
MAXTRON	122
MATSUI	070. 122
NAKAMICHI	220
MEGA	122
Nintaus	003. 035. 071. 079. 080. 081. 082. 090. 093. 129. 130. 291. 320. 322
NAKAI	122
NAPA	221. 277
NORCENT	222
OKON	072
Panasonic	014. 204. 273. 274. 420
Philips	012. 143. 152. 153. 154. 227. 264. 354
Pisheng	005. 037. 092. 098. 101. 282. 305. 306. 307. 308. 323. 331. 343. 344. 345. 346. 347. 348. 349. 350. 445. 446. 447. 449. 450
Pioneer	044. 229. 100. 120. 400. 418. 419
Piangao	327
POLYTRON	122
PHILCO	225. 226. 263. 268. 272
PARDIO	122. 337
PROSONIC	252
POWER SOUND	179
PHILIPS KARAOKE	228
Rowa	470
ROYAL	225. 272
RCA	230. 231
ROVER	133. 122
Skyworth	022. 025. 032. 034. 058. 096. 097. 100. 119. 121. 293. 301. 314. 321. 387. 412. 413. 444. 454. 469. 505
Sast	011. 020. 038. 059. 060. 076. 140. 142. 288. 481. 509. 571. 572
SHINCO	001. 010. 108. 416
Sharp	235. 236. 237. 434. 435
Shida	118
SAMSUNG	004. 006. 017. 049. 104. 149. 202. 232. 266. 488
Sanyo	233. 234
Sansui	013. 046. 356. 357. 440. 441
Shengli	439
SVA	108. 394
Sherwood	319
Soni	155
Sony	040. 042. 177. 178. 260. 368. 427. 428. . 442.
Songdin	472
SMC	238
SONICO	259
SUNSONIC	122. 641
SONASHI	304
SKYKRIVE	122
STEELE	122
SOUND TRACK	257
SUPERSONIC	225. 239. 272
SHASUGI	133. 122
SIEKO	122. 258
Toshiba	041. 069. 242. 243
Tsinghua tongfang	056. 057. 309. 436
Tongmuxun	083. 230. 434
THOMSON	434
TICSONIC	122
TCL	000. 015. 039. 054. 055. 120. 315. 353. 411. 483
TEAC	240
TOP TEC	241
UNIREX	244
UNITRON	241
VCD	245
VICTOR	047. 084. 103
VENON	122. 644
VIAR	122. 133
VISHIBA	122. 133
VEGATRON	122. 306
VOX	246
Wanyan	126. 146. 474
Wanbao	296
Wenfa	050
WEGA TANSS	278
WORLDSTAR	122. 170
Xintianli	131
Xiaxin	111. 112. 114. 135. 459. 460
Xianpan	070. 467
Xiandai	085. 438
Youbisheng	124
Yuxin	115. 116
YUNDAI	122
YAMAHA	227. 247
YAMAKAWA	248
YOSHIKAWA	122. 322
DVD CD VIDEO	253. 254. 255. 256
Other brands	007. 016. 019. 106. 109. 110. 113. 122. 123. 132. 133. 157. 141. 144. 148. 158. 159. 160. 161. 162. 163. 164. 165. 166. 167. 168. 169. 170. 171. 172. 173. 174. 175. 176. 245. 261. 280. 281. 324. 329. 330. 332. 358. 359. 360. 361. 362. 363. 377. 378. 385. 397. 401. 402. 403. 404. 405. 408. 426. 455. 462. 463. 434. 467. 473. 479. 480. 481. 482. 498

VCD

BRAND	CODE
Pisheng	000. 005. 008. 020. 025
Yingzibao	001
Sony	002. 013. 014. 081. 110. 140
Dongda	003. 005
Shinco	017. 012. 026. 027. 047. 090. 110
BBK	010. 044. 046. 085. 089. 127
Changhong	028. 029. 042. 124
Jianwu	032. 093
Onkyo	033. 080
Dihe	034
Hitachi	035
Jingge	036
Xiaxin	038. 040. 045. 054. 092. 101. 123. 125
Philips	039. 056. 101. 106
Aiduo	043. 048. 057. 061. 068. 072. 084. 091. 122. 113
Maiata	009. 011. 049. 051. 053. 055. 062. 120. 121. 145. 1463. 147
PANASONIC	050. 098. 097. 099. 052. 112 052
TOSHIBA	058. 067. 069. 073
AIA	059. 070. 133. 134
WSAST	060. 061
ZHAWEI	063
SMC	065
Marantz	066
Pioneer	071
JVC	074. 082. 109
Denon	075. 137. 139
Dongpeng	076. 117
Sharp	077. 138
Caini	078
VICTOM	079
RMS	020. 030. 083
Nintaus	086. 088. 095. 096. 103. 143. 144
THAKRAL	100
Rsheng	105
Yitong	023. 115
Skyworth	148
Panda	107. 108
Jiabao	111
Samsung	094
Sansui	128
VCD3.0	141. 142
SUBOR	119
TCL	104
JX2026G	116
DONGAN	024
Rowa	043
Kongque	102
Goldstar	136
Other brands	004. 006. 015. 017. 018. 019. 021. 023. 024. 030. 037. 061. 064. 080. 083. 087. 110. 112. 114. 118. 131. 115